



## Consider Your Surfaces

Is your surface flat or irregular? Thin tapes work well on flat surfaces, while irregular surfaces like corrugate, coroplast and other materials require a foam carrier tape such as Twin Stick® or Dubl Kote®.

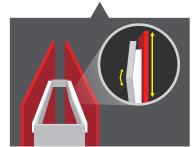


### Length

Long bond lines might cause flex or warp creating immediate stress on the bond and indicate the need of a foam tape.

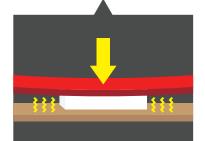

# Cushioning & Shock Absorption

Foam, compared to film provides cushioning and shock absorption qualities that keep the bond together if impact or movement is a concern.

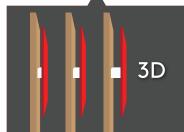

#### **Aesthetics**

Looking for impact? Thick Twin Stick can provide 3 dimensional properties.

#### Film, Foam, Transfer & Tissue Tapes

Essentra provides tapes in many formats suited to your specific need. We offer samples, so they may be tested in their application before purchasing. Still have questions? Speak to one of our tape experts at **866.800.0775**.

